




INSTALLATION INSTRUCTIONS
 3" BULL BAR PART 35-3003
 03-05 FORD EXPEDITION

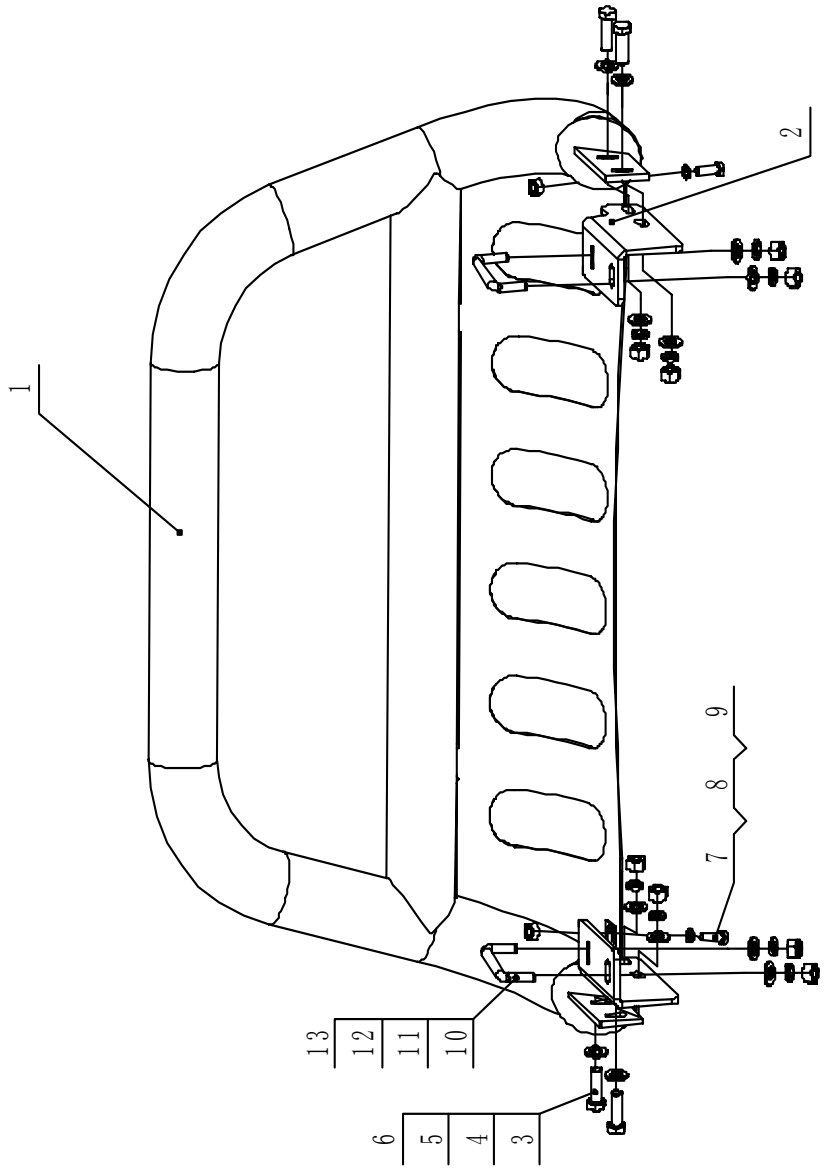

NO	NAME	REMARKS	QTY
13	SPRING WASHER	Ø10mm	4
12	FLAT WASHER	Ø10mm	4
11	HEX NUT	M10mm	4
10	U BOLT	M10mm	2
9	LOCK NUT	M6mm	2
8	FLAT WASHER	Ø6mm	2
7	HEX BDLT	M6x20mm	2
6	HEX NUT	M10mm	4
5	SPRING WASHER	Ø10mm	4
4	FLAT WASHER	Ø10mm	8
3	HEX BDLT	M10x30mm	4
2	MOUNT BRACKET	LEFT AND RIGHT	2
1	FRONT BAR		1