



INSTALLATION INSTRUCTION
BULL BAR #35-4003/B35-4003
2007 CHEVROLET TAHOE

PARTS LIST

- (1) BULLBAR
- (2) BRACKETS (DR.-PASS.)
- (6) 7/16X1 ¼ HEX HEAD BOLTS
- (6) 7/16 HEX NUTS
- (12) 7/16 FLAT WASHERS
- (2) 1/2X4 ¾ HEX HEAD BOLTS
- (2) 1/2 HEX NUTS
- (4) 1/2 FLAT WASHERS

PROCEDURE

1. REMOVE CONTENTS FROM BOX AND CHECK FOR DAMAGE. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
2. REMOVE FRONT LICENCE PLATE AND LICENCE PLATE BRACKET. IT IS NOT REQUIRED BUT STRONGLY RECOMMENDED. IF LOCAL/STATE LAW REQUIRES A LICENCE PLATE, LICENCE PLATE KIT IS AVAILABLE.
3. DETERMINE PASSENGER AND DRIVER SIDE BRACKETS. REMOVE TOW HOOKS AND PLASTIC RETAINER (SEE FIG 1). INSERT BRACKET ONTO FRAME, USING 1-7/16X1 1/4 HEX BOLT 2-7/16 FLAT WASHERS AND 1-7/16 HEX NUT. NOTE: 7/16 X 1 ¼ BOLT SHOULD BE FASTENED AT FAR END OF BRACKET FIRST
4. INSERT 1-1/2X4 ¾ HEX BOLT 2-1/2 FLAT WASHERS AND ½ HEX NUT THROUGH FRONT PART OF BRACKET (SEE FIG 2.). LEAVE LOOSE
5. ATTACH BULL BAR ON OUTSIDE OF BRACKETS USING 2-7/16 X 1 ¼ HEX BOLT 4-7/16 FLAT WASHERS AND 2-7/16 HEX NUT (SEE FIG. 3)
6. LEVEL AND ADJUST BULL BAR AS DESIRED. TIGHTEN AND TORQUE BOLTS.



INSTALLATION INSTRUCTION
BULL BAR #35-4003/B35-4003
2007 CHEVROLET TAHOE

7/16 X 1 1/4" HEX BOLT
(BACK END HOLE)



Fig 1 (Passenger Side)

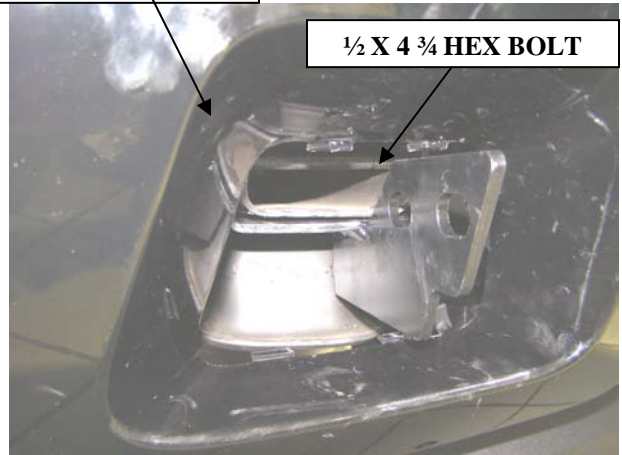


Fig 2 (Driver Side)



Fig 3 (Driver Side)